




Angler Armor Quick Start Guide

 **CAUTION!** Before you begin, please observe all safety precautions. Use appropriate Personal Protective Equipment. Seek qualified help when needed. Use extreme caution when working near the battery and wear hearing protection when working near siren. Do not use power supply in damp or wet conditions. 




1 Attach Power Supply

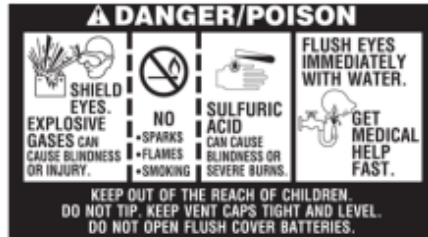

 **DO NOT ALLOW CONNECTORS TO SHORT CIRCUIT PRIOR TO INSTALLATION. BACK UP BATTERY DAMAGE CAN OCCUR-USE CAUTION**

Connections must be made to START battery Attach BLACK wire to NEGATIVE terminal and RED wire to POSITIVE terminal.

 **CAUTION-WHEN WORKING NEAR THE BATTERY PLEASE OBSERVE PRECAUTIONS AND USE APPROPRIATE SAFETY EQUIPMENT**



2 Download App

After downloading app, close app store screen. DO NOT OPEN APP or CREATE ACCOUNT. Proceed to step 3



Android



iPhone



3 Open Invite Email

Open invite email from Blynk on your smartphone. Click on "CREATE PASSWORD" link. This will open the app on your smart phone.



4 App is now open

Create a password. After creating your password you will be logged in to the app. Tap on "Add new device" and locate QR code inside product packaging.



5 Scan QR Code

Click on "Scan QR Code" and then choose "Allow" for camera access. On the Device Connected screen you can rename the device by tapping on the "Name Device" field. Click "Continue". On the Finish Set Up Screen click "Continue", "Done" and "Finish and Exit". App appears on screen and is ready to use.



6 Locate Central Processor


Test fit Central Processor on battery locker lid.

Make sure cable will not become damaged when locker lid is closed. Mount Central Processor as high up on locker lid as possible without striking locker lip or anything inside locker. When satisfied, peel backing from hook 'n loop and mount Central Processor on battery locker lid.



7 Locate Siren

Siren is pre-wired to Central Processor. Test fit location prior to mounting. Make sure that cable will not become damaged when lid is closed. Mount Siren so that it will not be standing in water or able to fill with water. There are endless mounting possibilities therefore, no hardware is provided.

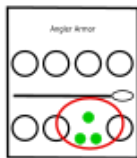


8 Verify Connectivity in App

Central Processor-Wait for the 3 virtual LEDs to turn GREEN. Radio-ON indicates Cellular radio is on and connected. Fix-GOOD indicates there is a locked GPS signal. Ready indicates the device is ready to ARM.



9 Locate Locker Sensors

There are 5 locker sensors. You may place them in any locker you wish to monitor. Make sure to place them as high as possible on the compartment lid. Pay attention to placement so the sensor does not strike anything inside the locker or the locker lip. When satisfied with placement, pull plastic battery tab to power sensor, peel backing from hook 'n loop and mount sensor.

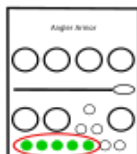

10 Verify Connectivity in App

Locker Sensors-There are 7 virtual LEDs used to show the connection status of the locker sensors. Once you power up the sensors, the first 5 LEDs should be GREEN. You may see an LED change occasionally to CLEAR and back to GREEN. This is considered normal operation. The last 2 LEDs are for optional sensors and will remain OFF until they are added.